

MEMOLUB[®] MPS System

The MEMOLUB[®] MPS (Multi-Point System) is precise, reliable, and easy to install. It contains all of the materials required to quickly put your MEMOLUB[®] HPS lubricator to profitable use in a multi-point application.

The system consists of a MEMOLUB[®] HPS lubricator, a distribution block which apportions the lubricant from the MEMOLUB[®] equally to all lube points, a mounting bracket with dust cover and all the push-in tube fittings you'll need for your bearings.

To install the system:



1. Mount the MEMOLUB[®] MPS using the supplied "L-Bracket".
2. Install the push-in fittings in your bearings.
3. Plug in the pre-filled tubing between the two.

It's quick and easy, just "Plug 'n Lube™".

Nylon tubing required to complete the installation is sold separately. The standard size tubing is 5/16" OD, but other sizes are available. Tubing can be purchased two ways; pre-filled in 5 foot increments from 5 to 30 feet, or empty in any length from 1 to 100 feet.

Our staff is available at 1-800-635-8170 to assist you in sizing a lubrication system to your specific application.

There are two system types available; one for grease applications and one for oil applications. When ordering, be certain to specify the system appropriate for your application. On each complete cycle of the Distribution Block, each outlet port ejects .3 cc's of lubricant. When 2 outlet ports are coupled using either the horizontal or vertical coupler, the output from one port is combined with the second port. The bearing that is connected to a coupled outlet port will receive .6 cc's per cycle of the Distribution Block.

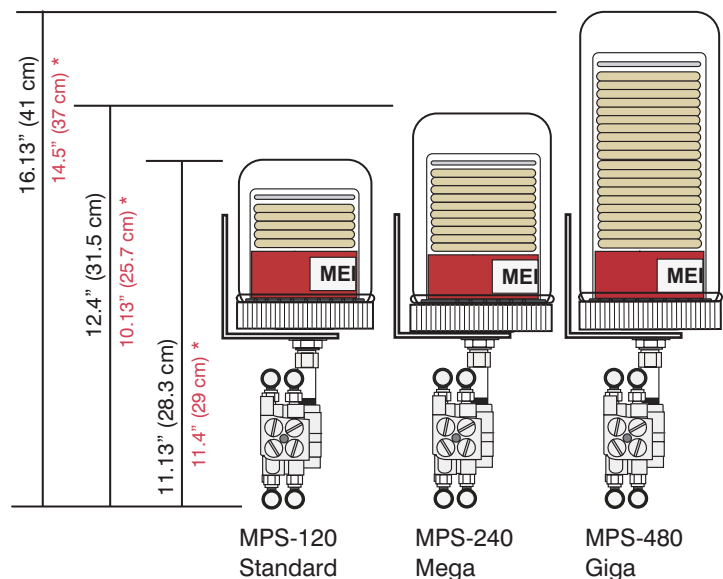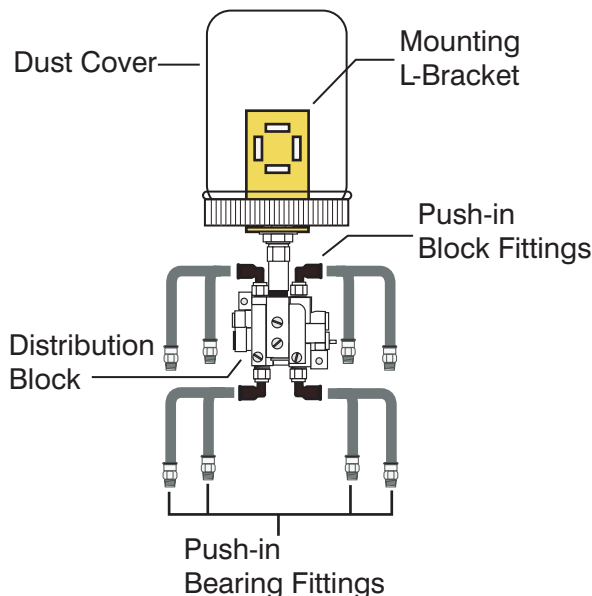

Diameter for all models are:

4.9" (12.4 cm) with Dust Cover

4.7" (12 cm) without Dust Cover

* Height dimension without Dust Cover

How to order your complete Multi-Point Lubrication System

A complete MEMOLUB[®] MPS (Multi-Point System) can be ordered by using the quick coding below. Simply replace the "X's" with the code corresponding to your selection in the sub-menus. Additional installation parts and nylon tubing (empty or pre-filled with lubricant) are also available.

MPS - XXX - XXX - XX - X - XXX

Lubricator size

120 = Standard HPS Model 120 (120cc of lubricant)
240 = Mega HPS Model 240 (240cc of lubricant)
480 = Giga HPS Model 480 (480cc of lubricant)

Power Options

R = HPS - Regular Configuration, Alkaline Battery Pack
L = HPS - with Cold Temperature Lithium Battery Pack
C = EPC - External On/Off Control, Battery Powered and MEMO Controlled
S0 = EPS - 4.5VDC Externally Powered - MEMO Controlled
S11 = EPS - 12VDC Externally Powered - MEMO Controlled
S21 = EPS - 24VDC Externally Powered - MEMO Controlled
P0 = PLCd - 24VDC Externally Powered and Controlled

Power Transformers and wire extension kits are available for all EPC, EPS and PLCd MEMOLUB[®] Power Options. Please call for availability.

Number of outlet ports

Refer to Set-up Guide for details

02 = 2 outlet ports (2 outlets @ .6 cc's)
03 = 3 outlet ports (3 outlets @ .6 cc's)
04 = 4 outlet ports (4 outlets @ .3 cc's)
05 = 5 outlet ports (4 outlets @ .3 cc's, 1 outlet @ .6 cc's)
06 = 6 outlet ports (6 outlets @ .3 cc's)
07 = 7 outlet ports (6 outlets @ .3 cc's, 1 outlet @ .6 cc's)
08 = 8 outlet ports (8 outlets @ .3 cc's)
09 = 9 outlet ports (6 outlets @ .3 cc's, 3 outlets @ .6 cc's)
10 = 10 outlet ports (8 outlets @ .3 cc's, 2 outlets @ .6 cc's)
11 = 11 outlet ports (10 outlets @ .3 cc's, 1 outlet @ .6 cc's)
12 = 12 outlet ports (12 outlets @ .3 cc's)

Type of Distribution Block

O = Oil
G = Grease

Bearing Fittings

5/16" (8mm) OD Nylon Tubing Fittings (These systems use IF3109-08-10 Block Fittings)

Plastic Push-In Fittings

01 = Straight 1/8" NPTM - (IF3175-08-11)
02 = Straight 1/4" NPTM - (IF3175-08-14)
03 = 90° - 1/8" NPTM - (IF3109-08-11)
04 = 90° - 1/4" NPTM - (IF3109-08-14)

Stainless Steel Push-In Fittings

SS1 = Straight 1/8" NPTM - (IF3805-08-11)
SS2 = Straight 1/4" NPTM - (IF3805-08-14)
SS3 = 90° - 1/8" NPTM - (IF3889-08-11)
SS4 = 90° - 1/4" NPTM - (IF3889-08-14)

1/4" OD Nylon Tubing Fittings

(These systems use IF3109-56-10 Block Fittings)

51 = Straight 1/8" NPTM - (IF3175-56-11)
52 = Straight 1/4" NPTM - (IF3175-56-14)
53 = 90° - 1/8" NPTM - (IF3109-56-11)
54 = 90° - 1/4" NPTM - (IF3109-56-14)

5/16" (8mm) OD Copper Tubing

Compression Fittings

(These systems use IF3175-08-10CCP Block Fittings)

CC1 = Straight 1/8" NPTM - (IF3175-08-11CCP)
CC2 = Straight 1/4" NPTM - (IF3175-08-14CCP)
CC3 = 90° - 1/8" NPTM - (IF3109-08-11CCP)
CC4 = 90° - 1/4" NPTM - (IF3109-08-14CCP)

1/4" OD Copper Tubing

Compression Fittings

(These systems use IF3175-56-10CCP Block Fittings)

CC6 = Straight 1/8" NPTM - (IF3175-56-11CCP)
CC7 = Straight 1/4" NPTM - (IF3175-56-14CCP)
CC8 = 90° - 1/8" NPTM - (IF3109-56-11CCP)
CC9 = 90° - 1/4" NPTM - (IF3109-56-14CCP)

5/16" (8mm) OD Steel Tubing

Compression Fittings

(These systems use IF3175-08-10SCP Block Fittings)

SC1 = Straight 1/8" NPTM - (IF3175-08-11SCP)
SC2 = Straight 1/4" NPTM - (IF3175-08-14SCP)
SC3 = 90° - 1/8" NPTM - (IF3109-08-11SCP)
SC4 = 90° - 1/4" NPTM - (IF3109-08-14SCP)

Example:

The part # MPS - 240 - R - 04 - G - 02 will be a Grease system with a 4 point distribution block, a Mega MEMOLUB[®] HPS Lubricator (Model 240 HPS) with straight bearing fittings having a 1/4" NPT Male thread.

Additional Ordering Information Required:


- MEMO Setting
Lubricant output is determined by preprogramming the "MEMO" fitting. Please refer to the MEMOLUB[®] HPS Lubricator Installation Instructions for proper output settings.
- Lubricant required.



PLI, LLC
Power Lube Injection
www.memolub.com

PLI, LLC * P.O. Box 044051 * Racine, WI 53404
Telephone 800-635-8170 * FAX 262-637-4090

MEMOLUB[®] Multi-Point System Configurations

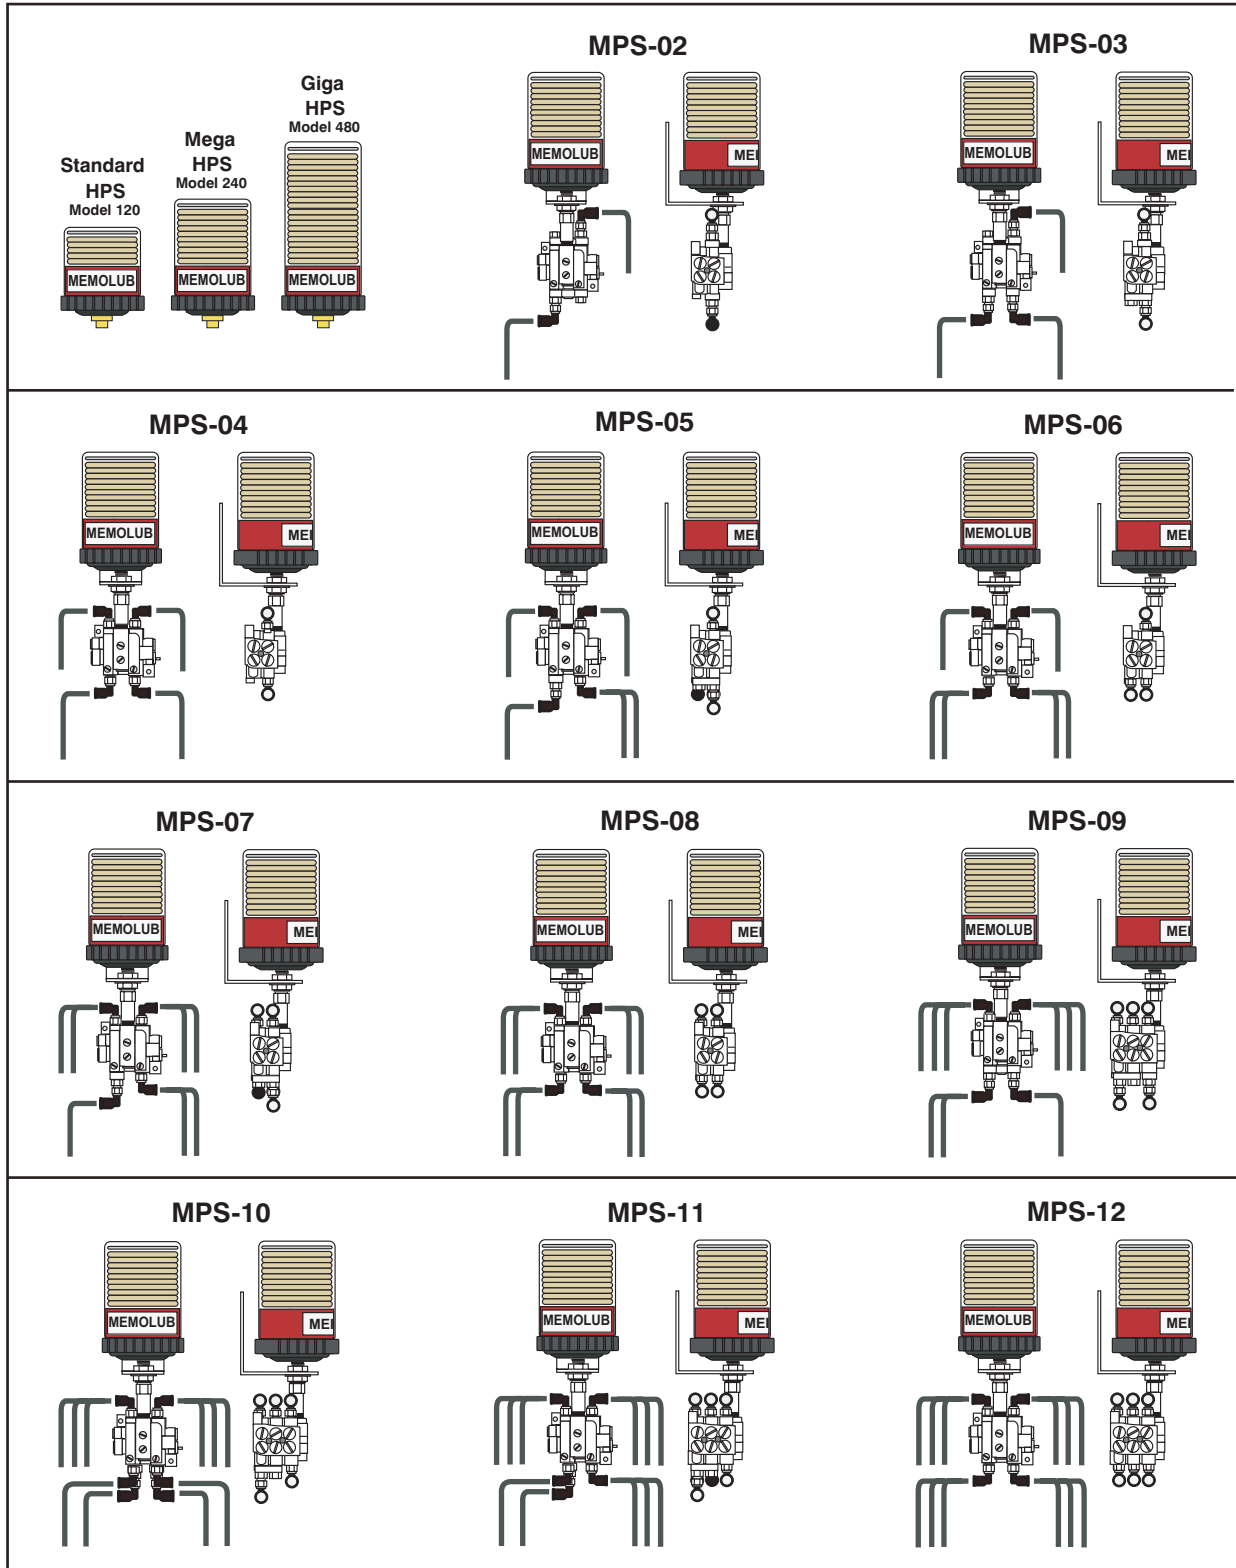


MEMOLUB[®] Multi-Point System Installation Instructions

Before you install your MEMOLUB[®] Multi-Point System, first program the MEMO fitting (if not factory-set) for your required lubricant output by following the included programming chart. Next, follow the 10-step installation instructions below.


Our staff is available at 1-800-635-8170 to assist you with any installation questions you have.



1. Remove dust cover jar from distribution system.

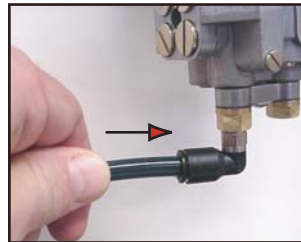

7. Cut tubing to desired lengths, using care to make square cuts. Insert the cut tubes into the distribution block. If you are using pre-filled "Plug 'n Lube" tubing (supplied by PLI), proceed to Step 9.

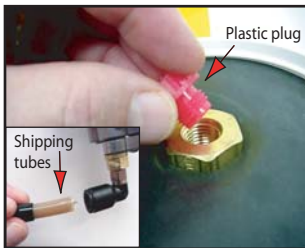


2. Remove the short shipping tubes from the ends of the distribution block fittings. Remove red plastic plug from the bulkhead fitting, which is attached to the mounting bracket.




8. To pre-charge empty tubing, screw the included maintenance adapter onto MEMO fitting. Apply a standard grease gun to adapter and slowly inject grease through the distribution block and tubing.



3. Mount the system in a convenient place that's easy to access.

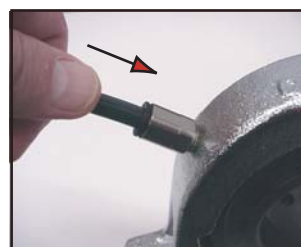

9. Insert the other end of the tubing into the bearing fittings.

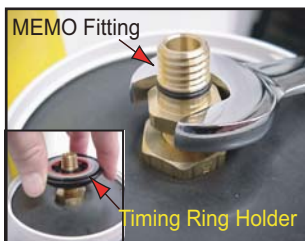

4. Screw the brass MEMO fitting onto the system inlet.

5. Gently press the black plastic timing-ring holder onto the brass



10. Screw MEMOLUB[®] HPS onto the MEMO. You should hear the unit test fire. Replace dust cover and your MEMOLUB[®] Multi-Point System is ready to go!



6. Fasten the tube fittings onto bearings.